

UNIVERSAL
REMOTE CONTROL
OPERATE:
TV,VCR,AUDIO,HDTV,
CABLE,SAT,VCD,DVR,
CD,DVD,HTIB,STB,Other

Audio Products.

INSTRUCTION

BOOKLET

Right reserved to
improve specifications
without notification

A. CODE INPUTING

1. OPERATE ON YOUR DEVICE YOU WANT TO CONTROL, (E.G. TURN ON TV DEVICE)

2. CHECK IN THE MANUAL FOR THE CODE OF YOUR BRAND NAMED DEVICES

(TRY IT FROM THE 1ST CODE, IF IT DOES NOT WORK, TRY THE 2ND...)

3. PRESS AND HOLD DEVICE KEY (E.G. TV KEY), AFTER 3 SECONDS, THE LED LIGHT WILL STAY ON. NOW RELEASE THE DEVICE KEY.

4. INPUT THE 4 DIGIT CODE IN ORDER (THE LED INDICATOR WILL BE OFF ONCE WHEN EVERY DIGIT WAS INPUT). AFTER FINISHED INPUTING, IF THE LED INDICATOR WILL BE OFF. (IT CERTIFY THE CODE YOU INPUT IS ACCEPTED).

IF THE LED INDICATOR WILL FLASH TWO TIMES AND STAY ON, IT CERTIFY THE CODE YOU INPUT IS UNACCEPTED, (THE CODE IS NOT RIGHT). NOW YOU ARE REQUIRED TO REPEAT FROM THE 2ND STEP ABOVE.

5. AIM YOUR REMOTE AT THE DEVICE (E.G. TV), CHECK THE FUNCTION KEYS OF THE REMOTE WORKS ON THE TV WELL OR NOT. IF IT IS OK, NOW FINISH THE PROGRAMMING, OR REPEAT TO STEP 2 TO TRY THE OTHER CODES.

(WRITE THE RIGHT CODE ON YOUR MEMO FOR NEXT TIME USING)

MARK: DURING THE PROGRAMMING, IF U DID NOT PRESS ANY KEY WITHIN 30 SECONDS, THE LED INDICATOR WILL FLASH TWICE AND QUIT THE PROGRAMMING

DURING THE PROGRAMMING, PRESS ANY OTHER KEY EXCEPT THE NUMBER KEY, YOU WILL QUIT THE PROGRAMMING MODE.

.. YOU MAY INPUT ANY CODE UNDER ANY DEVICE KEY.

B. BRAND NAME CODE SEARCHING

1.) PRESS AND HOLD THE DEVICE KEY (E.G. TV) AND CORRESPONDING DIGIT KEY OF UR DEVICE BRAND NAME (E.G. 1, 2, 3, 6) (SEE THE ATTACHED EXCEL

TO FIND THE DIGIT KEY NUMBER FOR UR BRAND), NOW THE LED INDICATOR WILL STAY ON, DO NOT RELEASE THESE TWO KEY

2.) AFTER 2 SECONDS, THE REMOTE WILL SEND A "POWER OFF/ON" DATA TO UR DEVICE. THE LED INDICATOR WILL FLASH AT THE SAME TIME.

3.) WHEN THE DEVICE IS AFFECTED (E.G. THE TV IS POWERED OFF), NOW RELEASE THE TWO KEY, IT WILL SAVE THE CODE AND QUIT THE SEARCHING MODE TO BE IN NORMAL MODE.

MARK: DURING SEARCHING, IF THE CODE IS IN THE BRAND, IT WILL SEARCH FROM THE NEXT CODE OF THE BRAND. IF NOT, IT WILL SEARCH FROM THE 1ST C20100DE.

DURING THE SEARCHING, YOU MAY RELEASE ONE KEY IF U RELEASE TWO KEY, IT WILL SAVE THE CODE AND QUIT THE SEARCHING MODE.

DURING THE SEARCHING, IF U HOLD TWO KEY, AFTER A CIRCLE SEARCHING, THE LED INDICATOR WILL FLASH TWICE AND BE OFF TO QUIT THE MODE

EXCEL OF THE BRAND NAME WITH ITS CORRESPONDING DIGIT NUMBER

DEVICE OR SET+	TV	VCR(DVD)	SAT(CBL/STB)	AUX(CD/AUDIO/DVR)
1	RCA	RCA	RCA	RCA
2	SONY	SONY	SONY	SONY
3	PHILIPS	PHILIPS	PHILIPS	PHILIPS
4	SAMSUNG	SAMSUNG	SAMSUNG	SAMSUNG
5	GE PROSCAN	GE PROSCAN	GE PROSCAN PIONEER	GE PROSCAN PIONEER
6	Zenith	Zenith APEX	Zenith Gemin JERROLD	Zenith TEAC NAD
7	MAGNAVOX	MARANTZ MAGNAVOX	MAGNAVOX TOCOM GENERAL INSTRUMENT	MARANTZ MAGNAVOX
8	PANASONIC SHARP TOSHIBA DAEWOO	PANASONIC SHARP TOSHIBA DAEWOO YAMAHA DENON	PANASONIC SHARP TOSHIBA	PANASONIC TECHNICS SHARP TOSHIBA AMAZA DENON
9	HITACHI SANYO LG JVC MITSUBISHI	HITACHI SANYO LG JVC MITSUBISHI	HITACHI LG	HITACHI SANYO LG JVC MITSUBISHI
0	SYLVANIA FISHER CURTIS-MATHES EMERSON	SYLVANIA FISHER CURTIS-MATHES EMERSON	ECHOSTAR DISH HUGHES PRIMESTAR	SYLVANIA EMERSON CURTIS-MATHES FISHER OPTIMUS KENWOOD ONKYO

C. MANUAL SEARCH

OPERATE ON YOUR DEVICE YOU WANT TO CONTROL, (E.G. TURN ON TV DEVICE)

a.) PRESS AND HOLD DEVICE KEY (E.G. TV KEY), AFTER 3 SECONDS, THE LED LIGHT WILL STAY ON. NOW RELEASE THE DEVICE KEY.

b.) PRESS "CH+ OR CH-" KEY ON THE REMOTE ONCE AND RELEASE. REPEAT THIS ACTION, (OR YOU CAN PRESS AND HOLD "CH+ OR CH-" KEY, AFTER 1 SECONDS, RELEASE AND IT WILL BE IN QUICK

SEARCH, YOU MAY PRESS "CH+" TO SEARCH BACKWARD, PRESS "CH-" TO SEARCH TOWARD, WHEN THE TV IS POWERED OFF, STOP THE PRESSING. AND IMMEDIATELY PRESS "ENTER" OR "OK" KEY OR SET KEY, OR ANY DEVICE KEY TO SAVE THE CODE.

NOW THE LED INDICATOR WILL BE OFF.

c.) PRESS THE "POWER" KEY TO OPERATE ON THE DEVICE (E.G. TV.) CHECK THE OTHER FUNCTION KEYS WORK WELL OR NOT. IF NOT, REPEAT TO THE STEP b.) TO PROGRAM AGAIN.

MARK: DURING THE PROGRAMING, PLEASE AIM YOUR REMOTE AT THE DEVICE.

DURING THE SEARCHING, YOU COULD PRESS "CH+ OR CH-" TO CHANGE DIRECTION OF SEARCHING.

DURING SEARCHING, PRESS ANY KEY EXCEPT "OK", "ENTER", "SET", "CH+", "CH-" KEY, ANY DEVICE KEY, IT WILL NOT AFFECT.

DURING SEARCHING, IF YOU DID NOT PRESS ANY KEY WITHIN 30 SECONDS, IT WILL QUIT THE SEARCHING MODE WITHOUT SAVING.

D. AUTO SEARCH

OPERATE ON YOUR DEVICE YOU WANT TO CONTROL (E.G. TURN ON TV DEVICE)

a.) PRESS AND HOLD DEVICE KEY (E.G. TV KEY), AFTER 3 SECONDS, THE LED LIGHT WILL STAY ON. NOW RELEASE THE DEVICE KEY.

b.) PRESS "POWER" KEY ONCE AND RELEASE, THE LED INDICATOR WILL FLASH ONCE EVERY TWO 2 SECONDS AND SEND "POWER ON/OFF" SIGNAL. WHEN THE DEVICE IS POWERED OFF (E.G. TV), NOW IMMEDIATELY PRESS "ENTER" OR "OK" KEY SET KEY OR ANY DEVICE KEY TO SAVE THE CODE. NOW THE LED INDICATOR WILL BE OFF.

c.) PRESS "POWER" KEY TO OPERATE ON THE DEVICE (E.G. TV). CHECK THE OTHER FUNCTION KEYS WORK WELL OR NOT. IF NOT, REPEAT TO THE STEP 2 TO PROGRAM AGAIN.

MARK: DURING THE PROGRAMING, PLEASE AIM YOUR REMOTE AT THE DEVICE.

DURING THE SEARCHING, IT WILL SEARCH BACKWARD FROM THE NEXT CODE, AFTER A CIRCLE SEARCHING, THE LED INDICATOR WILL BLINK TWICE AND QUIT THE SEARCHING WITHOUT SAVING CODE.

DURING SEARCHING, PRESS ANY KEY EXCEPT "OK", "ENTER", "SET", "CH+", "CH-" KEY, ANY DEVICE KEY, IT WILL NOT AFFECT.

E. QUICK SEARCH (ONLY FOR DEVICE TV, SAT, CABLE, STB)

1.) PRESS AND HOLD THE DEVICE KEY (E.G. TV), AFTER 3 SECONDS, THE LED INDICATOR WILL STAY ON, NOW RELEASE THE KEY.

2.) PRESS AND HOLD THE "MUTE" KEY, THE LED INDICATOR WILL BE OFF.

AFTER 3 SECONDS, IT WILL ENTER THE QUICK SEARCHING MODE. THE REMOTE WILL SEND THE DATA CONTINUOUSLY. EVERY 1 SECOND, IT WILL SEND 15 DATA, THE LED INDICATOR WILL FLASH QUICKLY.

3.) WHEN THE CHANNEL IS AFFECTED, RELEASE "MUTE" KEY, THE LED INDICATOR WILL BLINK EVERY 2.5 SECONDS

4.) WHEN THE CHANNEL IS AFFECTED AGAIN, PRESS "OK", "ENTER", "SET" OR ANY DEVICE KEY TO SAVE THE CODE AND QUIT THE SEARCHING

MODE.

MARK: DURING THE SEARCHING, IF YOU HOLD AND PRESSING THE "MUTE" KEY, IT WILL SEND "CHANNEL+-" DATA QUICKLY TO YOUR DEVICE. WHEN YOU RELEASE THE "MUTE" KEY, IT WILL SEND THE "CHANNEL+-" DATA SLOWLY BACKWARD OF THE FINAL 15 DATA.

IF YOU HOLD "MUTE" KEY TO SEARCH WITHOUT RELEASING, AFTER A CIRCLE SEARCHING, THE LED INDICATOR WILL BLINK TWICE AND QUIT THE SEARCHING MODE.

☒ CODE DISPLAY

1ST WAY

E.G. THE NOW DEVICE CODE IS 1085

1.) PRESS THE DEVICE KEY YOU WANT TO DISPLAY CODE.

2.) PRESS AND HOLD "DEVICE" KEY, THEN PRESS "OK" KEY. NOW RELEASE BOTH OF THE TWO KEYS.

☒ THE INDICATOR WILL BLINK ONCE AND STOP ONE SECOND, THE FIRST

DIGIT IS 1 OF THE CODE

☒ THE INDICATOR WILL BLINK 10 TIMES AND STOP ONE SECOND, THE SECOND DIGIT IS 0 OF THE CODE

☒ THE INDICATOR WILL BLINK 8 TIMES AND STOP ONE SECOND, THE THIRD DIGIT IS 8 OF THE CODE

☒ THE INDICATOR WILL BLINK 5 TIMES AND STOP ONE SECOND, THE FINAL

DIGIT IS 5 OF THE CODE

☒ WHEN FINISH DISPLAYING, IT WILL QUIT THE MODE AUTOMATICALLY.

2ND WAY

E.G. THE NOW DEVICE CODE IS 1085

1.) PRESS AND HOLD THE DEVICE KEY (E.G. TV), AFTER 3 SECONDS, THE LED INDICATOR WILL STAY ON, NOW RELEASE THE KEY

2.) PRESS "DISP" KEY AND RELEASE, THE LED INDICATOR WILL BLINK AND STAY ON.

3.) PRESS NUMBER KEY OF THE REMOTE FROM "1,2,3,4,0" SLOWLY, WHEN YOU PRESSED ONE OF THE DIGIT KEY, THE LED INDICATOR WILL BLINK ONCE, NOW STOP PRESSING, THE KEY NUMBER IS THE 1ST DIGIT OF THE CODE.

(E.G. WHEN YOU PRESSED THE KEY "1", THE LED INDICATOR BLINK, IT MEANS THE 1ST DIGIT OF THE CODE IS "1")

4.) REPEAT PRESSING FROM "1,2,3,4,0" SLOWLY,

(E.G. WHEN YOU PRESSED THE KEY "0", THE LED INDICATOR BLINK, IT MEANS THE 2ND DIGIT OF THE CODE IS "0")

5.) REPEAT PRESSING FROM "1,2,3,4,0" SLOWLY,

(E.G. WHEN YOU PRESSED THE KEY "8", THE LED INDICATOR BLINK, IT MEANS THE 3RD DIGIT OF THE CODE IS "8")

6.) REPEAT PRESSING FROM "1,2,3,4,0" SLOWLY,

(E.G. WHEN YOU PRESSED THE KEY "5", THE LED INDICATOR BLINK, IT

MEANS THE 4TH DIGIT OF THE CODE IS "5")
NOW THE CODE IS 1085.

VOL PUNCH THROUGH FUNCTION

IT MEANS WHEN YOUR REMOTE IS WORKING UNDER OTHER DEVICE KEY

FOR YOUR DEVICE EXCEPT TV, IT WILL SEND THE "VOL+,-, MUTE" DATA TO THE TV.

UNDER ANY DEVICE KEY, INPUT CODE "9908", IT WILL OPEN OR CLOSE PUNCH THROUGH FUNCTION.

ALL OFF FUNCTION

IF YOUR REMOTE HAS "ALL OFF" KEY, PRESS "ALL OFF" ONCE, THE REMOTE WILL SEND "POWER" DATA TO ALL DEVICES

DEPART KEY BUTTONS CORRESPONDING DESCRIPTION EXCEL:

KEY	FUNCTION
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
ENTER	Used after direct channel number entry to immediately change to the selected channel
VOL+	Changes the volume level of the product, normally the TV.
VOL-	Changes the volume level of the product, normally the TV.
CH+	Changes the channels
CH-	Changes the channels
TV/AV	For some TVs, press repeatedly to select from available viewing sources (antenna, cable box, VCR, etc.).
POWER	Turns product On or Off.
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	Selects menu items for the device you are controlling
MENU	Menu
DISP	Display, Info
MUTE	Turns off the TV sound while the picture remains
PAGE+	Controls DVD/CD track selection i.e. DVD/CD Track Skip Up/Down (in DVD and SAT modes). Note the VCR buttons also control DVD when in DVD Mode

PAGE	Controls DVD/CD track selection i.e. DVD/CD Track Skip Up/Down (in DVD and SAT modes). Note the VCR buttons also control DVD when in DVD Mode
GUIDE	displays satellite or cable on-screen program guide
REPEAT	performs DVD players A-B Repeat (or RPT A.B) function for repeat play of current Chapter or Track
→	Return to LIVE-Catches you up to LIVE Broadcast. Normal
STOP	STOP ■
PLAY	PLAY ▶
QUIT	Used to exit menu functions
REC	Record ●
PAUSE	PAUSE
FWD	FF ►►
REW	REW ◀◀
F(PIP)	TV Picture-in-Picture control
R.ZONE	
C(SWAP)	Swap TV PIP screens
BYPASS	BYPASS
T(SLEEP)	Sleep Timer
↺	INSTANT REPLAY
R(INPUT)	button performs the satellite TV/SAT function
SUB-T	TV Closed Caption (if your TV has this feature) or DVD Subtitle toggle
(-)/+100	Used for channels greater than 100, (-) used for digital channels like 2-3.